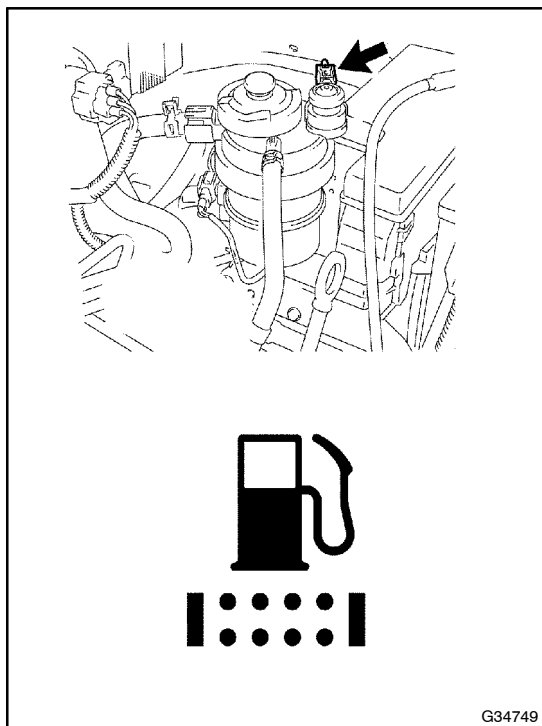
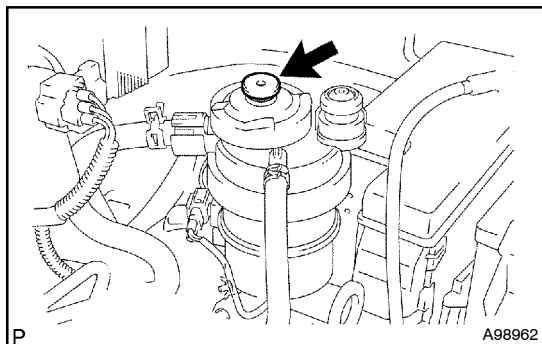


7. RESET FUEL FILTER AND SEDIMENTER WARNING LAMP

- (a) Turn the ignition switch ON.
- (b) After turning the ignition switch ON, connect the warning switch connector within 3 to 60 seconds.
- (c) Check that the combination meter's filter warning lamp turns off.

**8. BLEED AIR FROM FUEL SYSTEM**

- (a) Using the hand pump, bleed air from the fuel system until pumping becomes difficult.

**9. CHECK FOR FUEL LEAKS**

- (a) Start the engine. Check that leaking sounds, sucking sounds or other unusual sounds cannot be heard.