

(e) Turn the fastener nut until a "click" sound is heard.


HINT:

Just before the marks of the case and nut align, the turning difficulty of the fastener nut will increase. Use a screwdriver as a lever to turn the fastener nut.

(f) Measure the distance between the marks on the cap and case, and the clearance between the cap and case.

Distance (A): 1 mm (0.039 in.) or more

Clearance (B): 1 mm (0.039 in.) or less

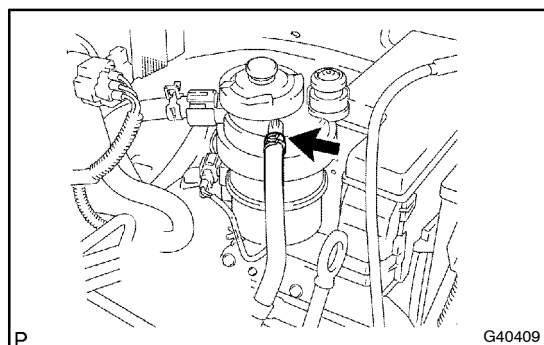

(g) Connect the hose to the filter outlet side and install the clip as shown in the illustration.

5. TIGHTEN FUEL TANK CAP ASSY

6. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL